



Aircube Setup


1. Open UISP APP on the phone
2. Get The Latest Firmware for the Aircube. You must **Upgrade to 2.8.0** > then to Higher Firmware Version
 - 1. Click More Button
 - 2. Click Firmware
 - 3. Scroll Down to **Aircube** Section
 - 4. Download 2.8.0 and *Newest Firmware* at the top of the section

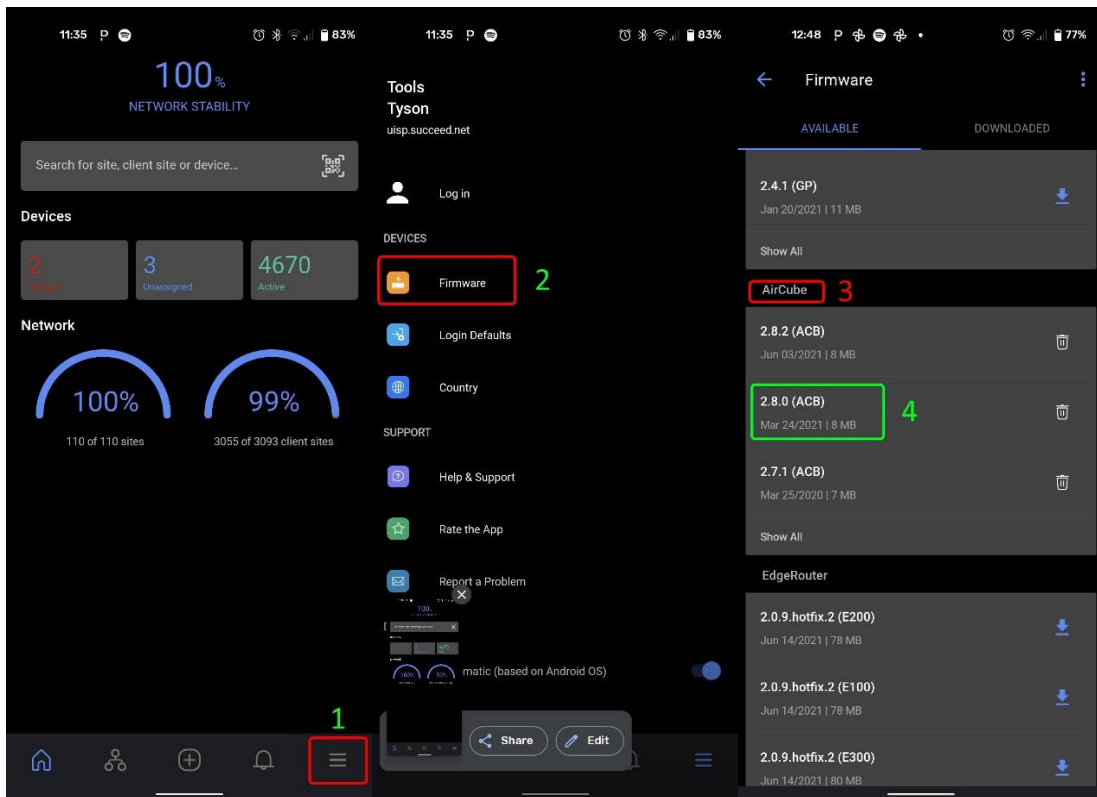

3. Push **+ Button** at the bottom of UISP is open

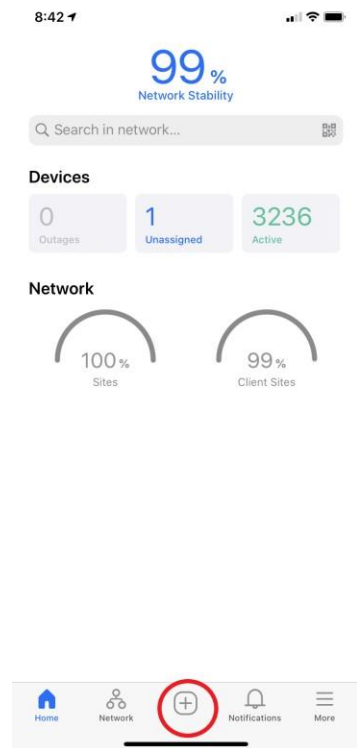


4. Push **QR Button** Icon at the top right

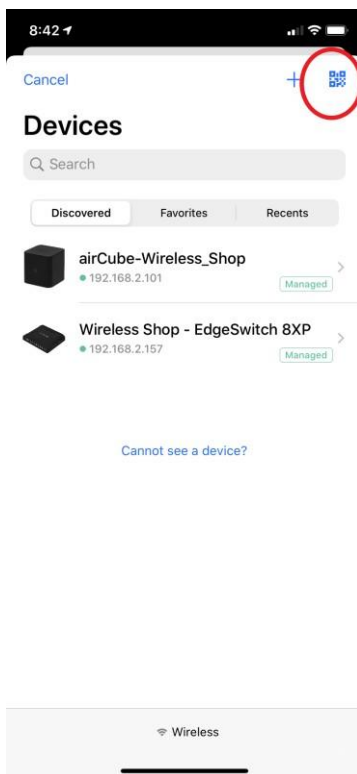


5. **Scan Barcode** on the bottom of Aircube and Push Join


- a. If you can not join Via the QR code, Connect to Aircube SSID from your phone, like a normal WI-FI Network. The default **WPA2 password** is listed on the bottom of the Aircube

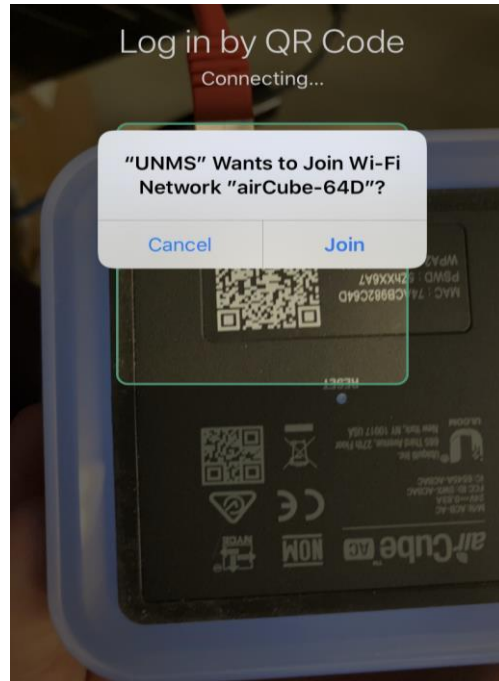


6. On main page push “More” at the bottom right and then **Firmware Upgrade**

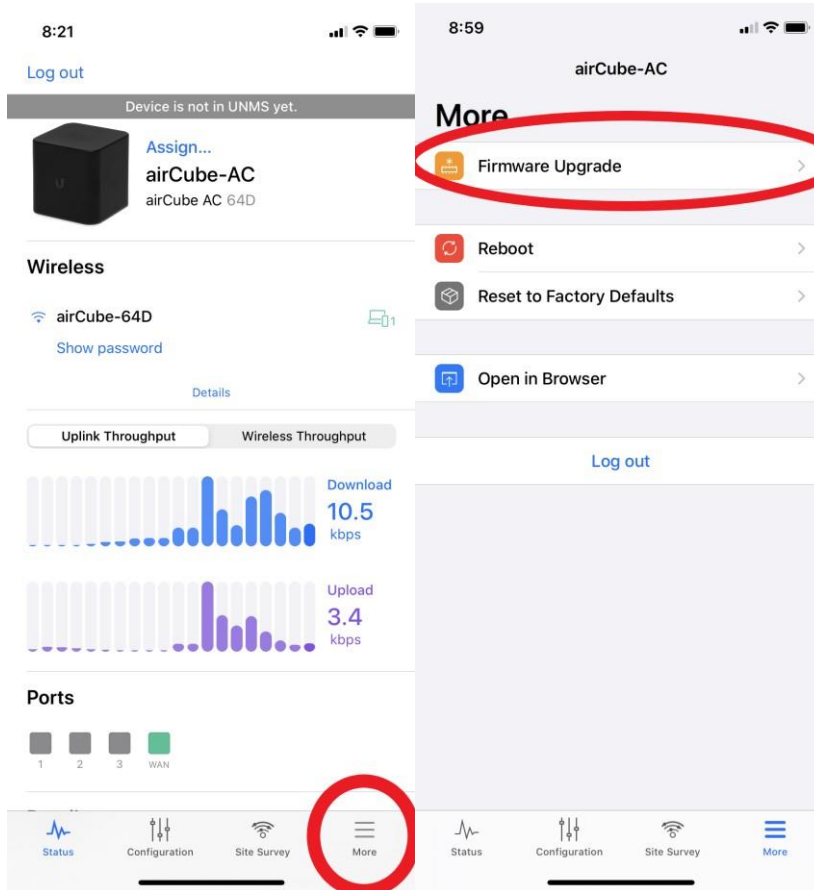


7. Look at the top to see what Firmware and upgrade if there is a newer version showing. *Must upgrade to 2.8.0 First*

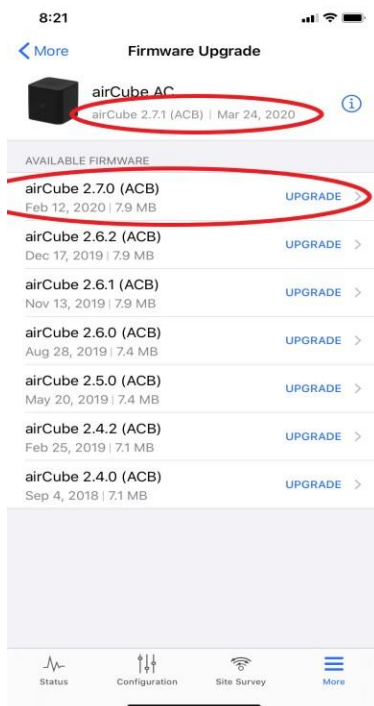


8. Upgrade usually takes a few minutes.
DO NOT unplug until you see it pop
back up in your list of Wireless devices
in your phone's settings

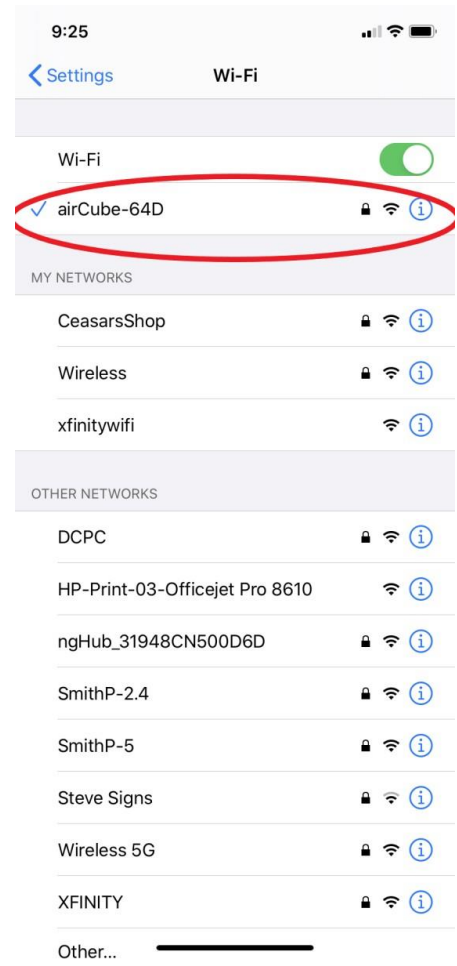


9. Once you login back in the Aircube in
UISP go to **Configuration** at bottom and
select wireless and push **2.4 GHZ Radio**
option

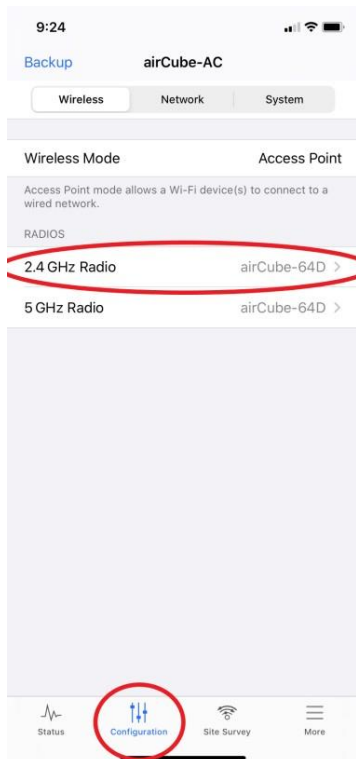


10. Setting 2.4 GHz Radio Settings
- Change SSID to customer last name.
 - Change password to the phone number on account 530xxxxxxx. No spaces.
 - Change the Channel Width to **Auto 20/40 MHz**
 - Slide power to max and then push **PASTE TO 5GHz.**
 - Then push done at top right

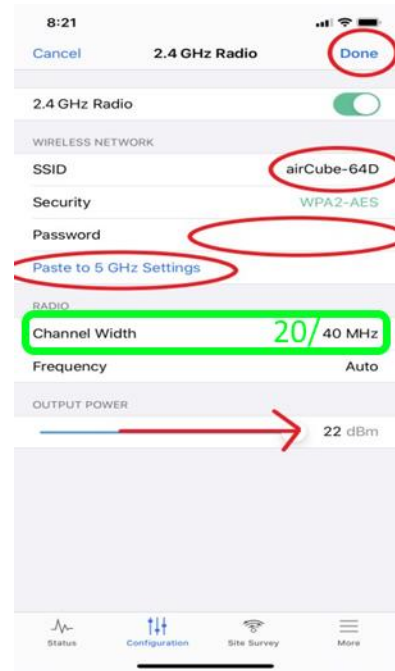


11. Now go to the **5GHz**
- Change Channel width to **40MHz**
 - Change Frequency to **Auto**
 - Slide power level to max
 - Push done at the top right

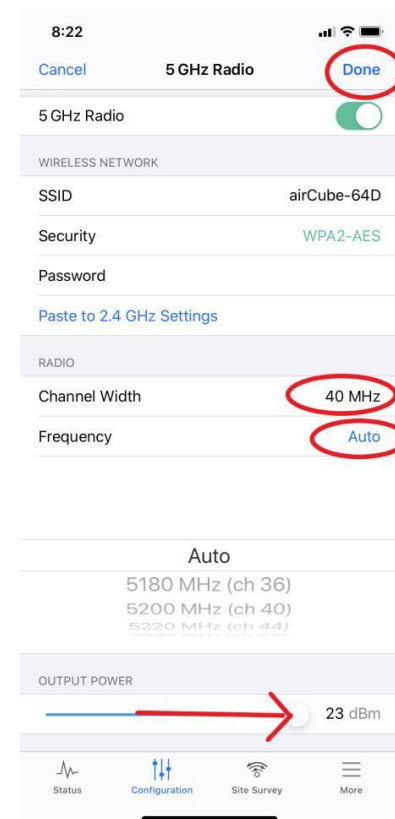

12. Next, push **network** tab at the top and open WAN Network. Make sure **Block Management Access** is **OFF** and then **Done** at top right.

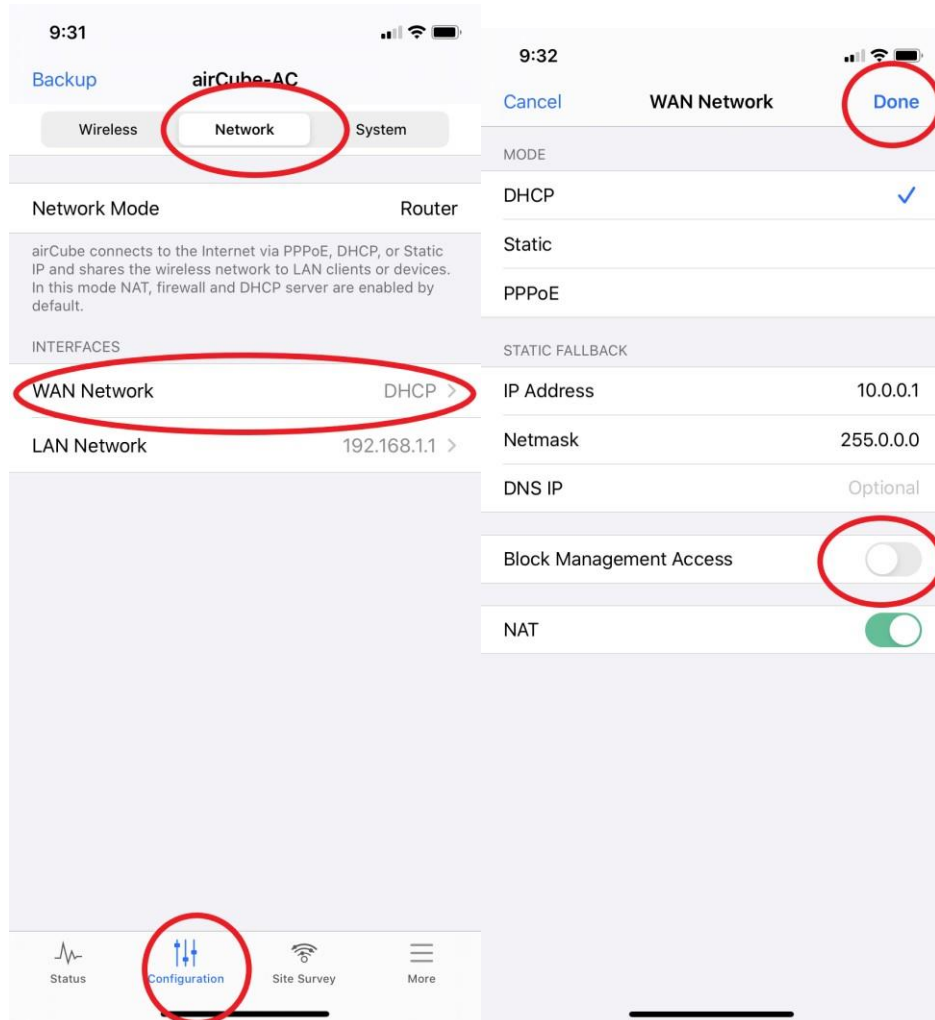

13. **System** Tab at the top.
 - a. Change device name to AirCube-FirstName_LastName.
 - b. Turn **Reset** button OFF.
 - c. Change username to admin and password to \$ucc33D!
 - d. Change the time zone to -8 Hours America/Los Angeles
 - e. Tap **Done** at the top

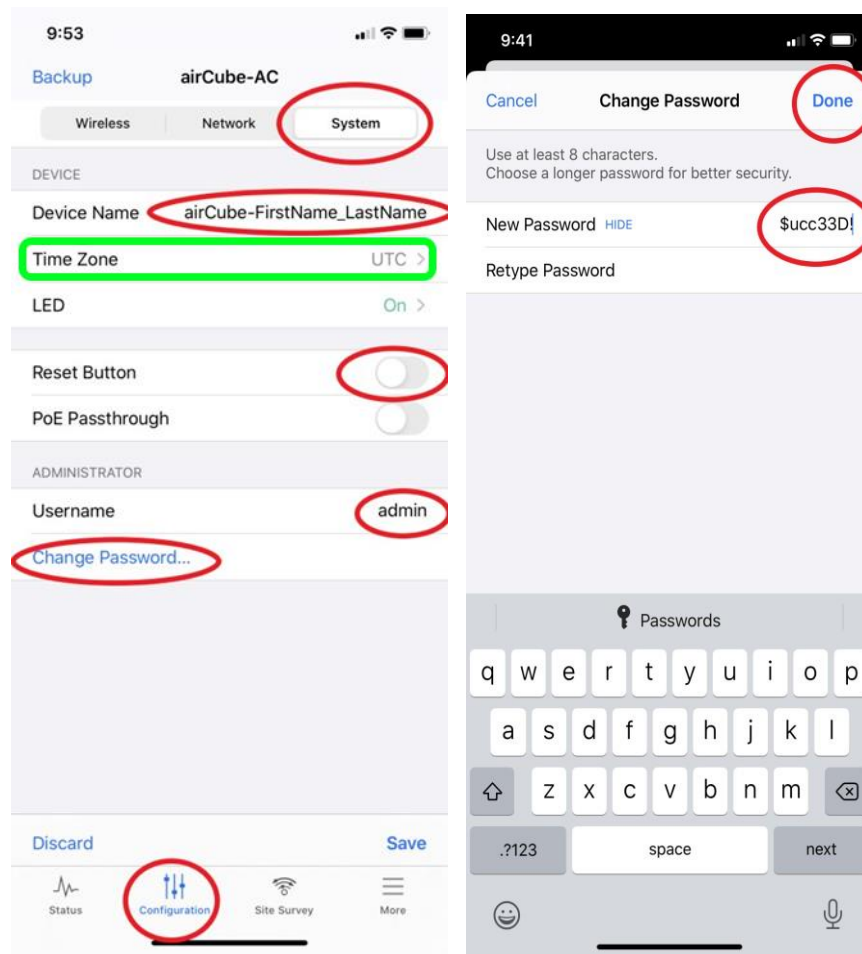


After the settings changed, The SSID and Wireless password will be the one you set. Connect to it and confirm the internet is worki

14. You will need to add the UISP key manually through the web browser. Open web browser on laptop or phone and navigate to <https://192.168.1.1>

Login with **admin** and the password is **Normal Password**

Click on the configuration button

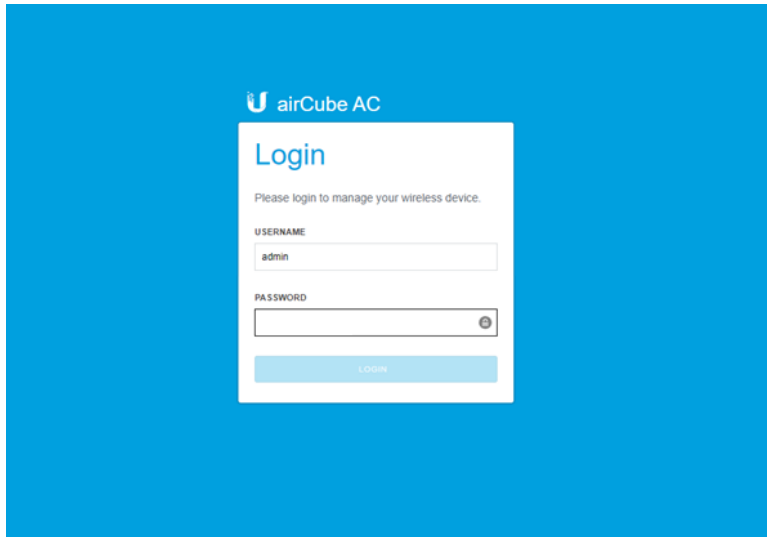

Click **System Gear** Icon on the Left then Turn on the UNMS service and **paste the key** below. Then Click **Save**

`wss://uisp.succeed.net:443+wOXdEHT9uxsUPGZdB2GnED8TIEFox2QrDgutEvulugBa6Lsm+allowSelfSignedCertificate`

